


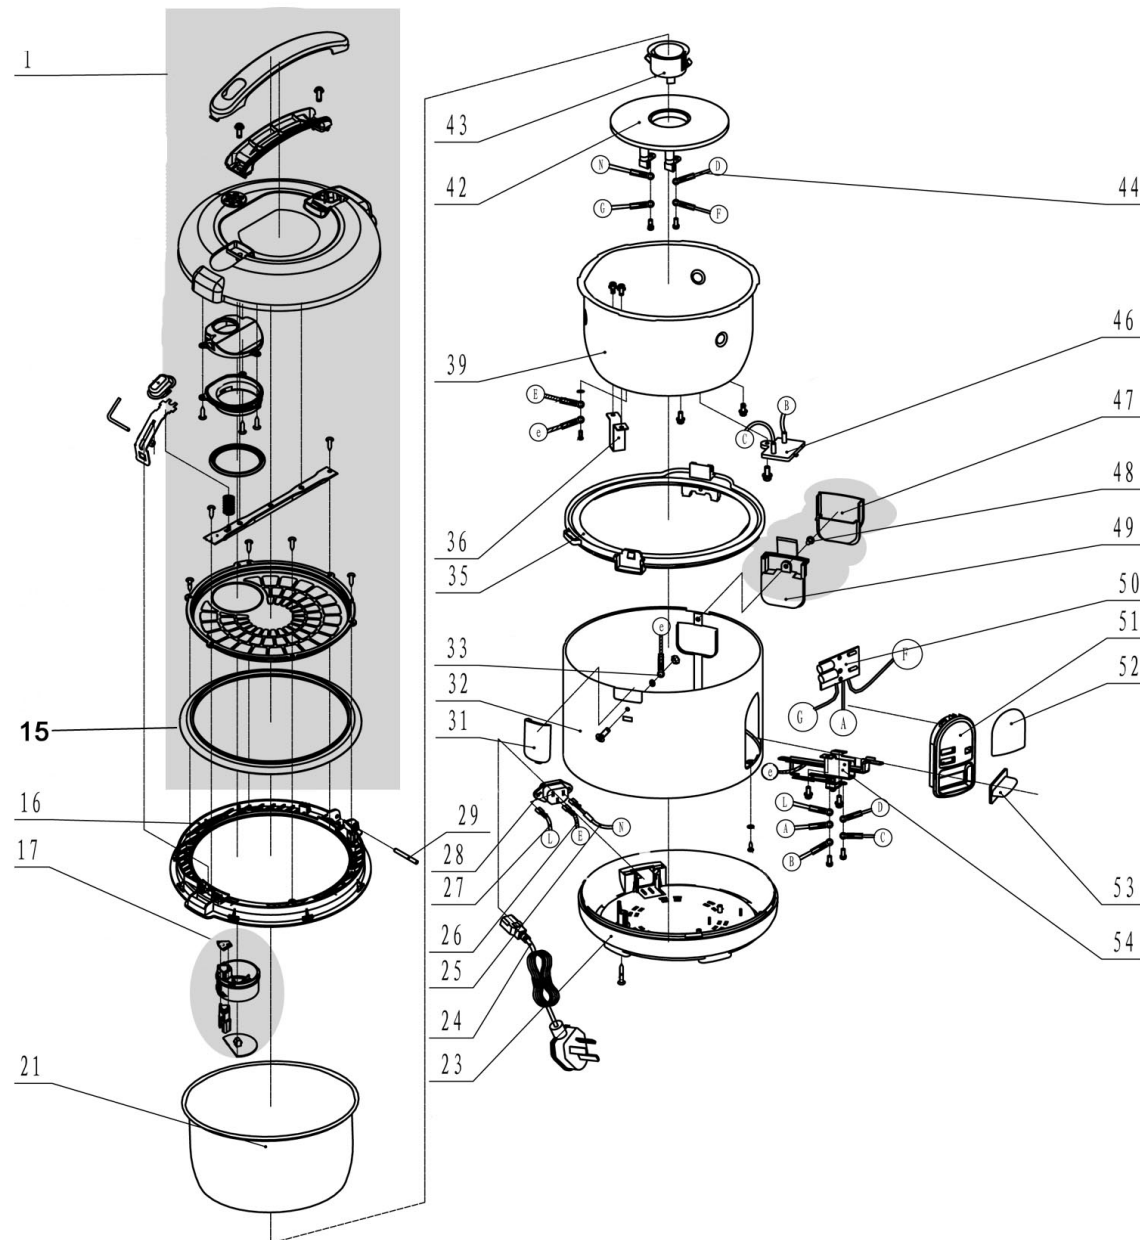

Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Deckel, komplett	Lid, complete	E015052801
15	Dichtring	Sealing ring	E015052815
16	Ring	Ring	E015052816
17	Druckventil	Pressure valve	E015052817
21	Innentopf	Inner pot	E015052821
23	Boden	Bottom	E015052823
24	Anschlusskabel	Power cord	060503511
25	Verkabelung, innen mit Steckdose	Inner wire with plug socket	E015052825
29	Bolzen	Bolt	E015052829
31	Abdeckung	Cover	E015052831
32	Gehäuse	Housing	E015052832
33	Erdungskabel	Earting Wire	E015052833
35	Ring	Ring	E015052835
36	Halterung	Holder	E015052836
39	Halterung, innen	Inner holder	E015052839
42	Heizkörper	Heating element	E015052842
43	Thermostat	Thermostat	E015052843
44	Verkabelung, innen	Inner wire	E015052844
46	Heizkörper z. Warmhalten	Heating element f. keeping warm	E015052846
47	Kondenswasserbehälter	Condensed water container	E015052847
50	Kontrolllampe	Indicator light	E015052850
51	Blende	Panel	E015052851
52	Bedienfeldfolie	Control panel sticker	E015052852
53	Knebel	Knob	E015052853
54	Schaltereinheit	Switch unit	E015052854
o.Abb./n.pic	Dämpfeinsatz	Steamer	E015052855
o.Abb./n.pic	Messbecher	Measuring cup	E015052856
o.Abb./n.pic	Reislöffel	Rice spoon	E015052857



Reiskocher 1,8L SD
Artikel-Nr.: 150528

Ersatzteilliste
01.01.2017