

Part No.	Part Name	QTY				IB500LV
1-1	Screw plunger 1	2				
1-2	Screw plunger 2	1				
1-3	Screw plunger 3	1				
1-4	Screw plunger 4	1				
1-5	Screw plunger 5	1				
1-6	Screw plunger 6	1				
2	3*10 CB Screw	2				
3	3*15 CB Screw	1				
4	M4*1 Screw	9				
5	Brush cover	2				
6	Brush	2				
7	3246 Brush cylinder spring	2				
8	Brush rack	2				
9	3*12 CB Screw	2				
10	Rubber interlocking protector	1				
11	Left housing	1				
30	Right housing	1				
12	Spline sleeve	1				
13	Aluminium head	1				
14	608 Bearing	2				
15	Motor fixed board Screw	1				
16	Motor fixed board	2				
17	IB500W Stator	1				
18	IB500W Rotor	1				
19	Brush fixed rack	2				
20	Interlocking push bolt	1				
21	Interlocking push bolt Spring	1				
22	Switch osculant staff	1				
23	Switch	1				
24	Push bolt spring	1				
25	Push bolt	1				

26		Cable sheath	1				
27		Power cord with tail	1				
28		Pressing board screw	2				
29		Pressing board	1				
31		Rubber push sheath	1				
32		Speed control key	1				
33		Switch sheath	1				
34		Male plug	1				
35		Speed control board	1				
36		Switch osculant staff spring	1				
37		Speed control board	1				
38		Female plug	1				
39		Lead wire of female plug	1				

