

MAXIMA

Drink Dispensers



GEBRUIKSHANDLEIDING

USER MANUAL



**ALVORENS U DIT PRODUCT IN GEBRUIK GAAT NEMEN DIENT U EERST AANDACHTIG DEZE
GEBRUIKSHANDLEIDING DOOR TE LEZEN**

BEFORE USING THIS PRODUCT YOU SHOULD READ THIS USER MANUAL PROPERLY



English

Introduction

Thank you for purchasing this Maxima product. In order to obtain the maximum benefit and use of this product, please read these instructions completely before attempting to install or use this product.

Your new Maxima product is manufactured with advanced production techniques. Every product is inspected before shipment and tested to ensure operator safety and product quality. All parameters have reached or exceeded the national standard.

The Maxima drink dispensers can be used for cooling and stirring liquids. The machines are safe, stable and easy-to-use. This appliance is good to use for example for cloudy apple juice and fresh orange juice. All parts in contact with liquids are made of stainless steel or food grade plastics.

At Maxima we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

We know you will enjoy using this product and Thank You for choosing our product. We hope you consider Maxima for your future equipment purchases.

Safety regulations

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- This appliance may only be used for cooling and stirring liquids.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. **Not following these instructions could give rise to life-threatening situations.**
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not place the machine on its side or upside down, also not while the appliance is being transported. Do not turn the appliance in an angle of more than 45°.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. When the plug or cord is damaged, you should have it repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired by a certified repair company.

- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Never let children use appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- **Warning!** As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Never carry the appliance by the plastic bowls.
- Do not use any extra devices that are not supplied along with the appliance.
- The electrical installation must satisfy the applicable national and local regulations.

Preparations before using for the first time

- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do **NOT** use the appliance.
- Remove all the packing material. Take all accessories out of the appliance.
- Place the appliance in the middle of a steady place and level the appliance.
- Make sure the appliance is not placed next to any sources that radiate heat (for example a heater, stove or oven).
- Make sure the appliance is placed 10 cm from every other object or walls.
- Position the appliance in such a way that the plug is accessible at all times.
- Clean the appliance and accessories with luke-warm water and a soft cloth.
- Place the collector in front of the appliance.
- Place the plastic bowl with the rubber seal on top of the appliance.
- Place the tap at the front of the plastic bowl.
- Place the mixing element with the iron stick in the plastic shaft, which is found in the bowl.
- Place the cover on top of the bowl.

- Follow the steps in chapter 'Operation'.

Operation

- Plug the appliance into the main socket.
- Fill the plastic bowl with a liquid.
- **ATTENTION!** The appliance can not be turned on, when there is no liquid in the bowl. Fill an empty bowl with water when it is not used and you wish to use the others.
- Use the 'mixing' button at the back of the machine to start the appliance. The appliance will keep the liquid in motion.
- Use the 'cooling' button at the back of the machine to start the appliance. The appliance will start cooling the liquids.
- By pushing a glass against the iron tap at the front of the appliance, you can tap the liquid out of the appliance.
- When the appliance is not being used, turn off the machine by pressing the 'On/Off' button on the control panel.
- When the appliance will not be used for a longer period, please remove the plug from the main socket.

Cleaning and maintenance

- Always remove the plug from the socket before any cleaning or maintenance is being done to the appliance.
- **ATTENTION!** Do not use any aggressive detergents or scourers, which may cause scratches. Do not use gasoline containing or solvents while cleaning. Make sure no water enters the appliance.
- Clean the accessories and the inside and outside of the appliance with a damp cloth (water with mild detergent). Dry the accessories and the appliance by making use of a dry towel.

Specifications

Name	Drank dispenser		
Model:	DP1-18L	DP2-18L	DP3-18L
Power:	230 V ~ 50 Hz		
Connected load:	200 Watt	300 Watt	350 Watt
Dimensions:	H710 x W345 x D445 mm	H710 x W460 x D445 mm	H710 x W710 x D445 mm
Weight:	Ca. 20 Kg	Ca. 28 Kg	Ca. 39 Kg
Casing:	Stainless Steel		
Accessoires:	Rubber seals, plastic bowl(s) incl. cover and mixing element.		

Storage

- Make sure the appliance is cleaned the right way before it is being stored.
- Coil the power cord and put it away.
- Store in a cool and dry place.

Guarantee

Thank you for using our products, our company will follow related provisions from our "Algemene Voorwaarden", and provide you services when you can show us the invoice.

We provide 12-month warranty from the date of purchase (invoice date). In the warranty period, our company is responsible for free parts if there is a device fault or quality problem of spare parts under correct operation.

The following does not belong to free services:

1. Damages result from transportation, installation, improper connections.
2. Component damages caused by failing to provide power and voltage as required in technical data.
3. Damages caused by disassembling products, adjust or change the mechanical and electrical structures without permission.
4. Damages caused by improper operation, cleaning and maintenance.
5. Non-man-made damage, such as damages from abnormal voltage, fire, building collapse, lightning, floods and other natural disasters, and damages from rats and other pests.
6. Failure in following the manual when operating.
7. Wearable and expendable parts.
8. Altered invoice or without invoice.

Discarding

- When discarding the appliance at the end of its useful life, please observe the regulations and guidelines in force at that time.