

## Assembly instructions

### Laundry Trolley

Modell AF 264 (Order No. 399-1019)



#### Technical and other specifications:

- \* Laundry trolley
- \* Framework - material: stainless steel
- \* Laundry bag - material: polyester
- \* Laundry bag removable, washable up to 40 ° C
- \* Laundry bag for aprox. 20 - 25 kg of laundry
- \* Framework: stable version
- \* with 4 hard rubber wheels
- \* Wheel diameter: 100 mm
- \* Delivery in a "flat pack" for easy assembly
- \* Delivery inclusive tool
- \* Dimensions: W 900 x D 650 x H 850 mm
- \* Weight: 10 kg net / 11 kg gross

#### 1. Check for completeness of the delivery.

##### Box content:

1x Base frame for mounting of the wheels  
 1x Upper frame  
 4x Vertical pipes  
 4x Threaded rods with 4cm thread above and below  
 1x Laundry bag with 10 carbine fasteners


and

1x small parts carton with:

- A** 4 Wheels with mounting plate
- B** 1 Allen key
- C** 16 Screws
- D** 1 Spanner
- E** 20 Hex nuts with clamping  
(Plastic liner)

PLEASE NOTE: *These nuts are considered parts to be used just once, due to the plastic liner. Do not reuse, this screw connection would then not have enough strength!*

- F** 4 Corrugated washers  
(preformed)

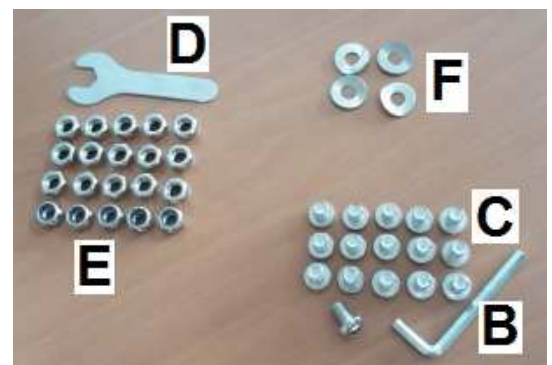

## Assembly instructions Laundry Trolley Modell AF 264

### 2. Assembly:

- I. Carefully remove all parts from the carton and remove the packing material (bags/foils).
- II. Lay the base frame on a blanket or cloth, in order to avoid scratches. Place so that the plates for the pates for the mounting of the wheels point upwards (see images III).
- III. Mount the wheels each with 4 screws (B) and 4 nuts (D) onto the pre-drilled mounting plates, thereby insert the screw from the bottom through the holes and screw on the nut by hand - so the plastic inset is pointing upwards (see image III).
- IV. After assembly of all 4 wheels tighten the screw connections with the Allen key and the spanner.
- V. Now put aside the base frame with the wheels. Warning, make sure no one trips over it!
- VI. Place the upper frame with the insite tapped holes upwards on the blanket/cloth.
- VII. Now screw in the four threaded rods in the tapped holes of the top frame each only approximately 1 centimeter deep (see image VII).
- VIII. Thread the 4 vertical tubes each over the threaded rod and in accordance with the form place it on the upper frame. The rod protrudes now approximately 3 cm out from the vertical pipe (see images VIII).
- IX. Finally, place the base frame with the mounted wheels onto the vertical pipes (wheels again pointing upwards).
- X. Establish the connection with the last 4 nuts (D): lay the corrugated washer (E) between frame and nut, adapted according to the shape. Screw the nut on, with the clamping part upwards, first by hand, then tighten with the locking spanner (see image X).
- XI. Now the frame can be reversed, the laundry bag unfolded and hooked inside out over the upper frame by means of carbine fastener (see image XI).
- XII. Before use clean the framework with a mild detergent, suitable for stainless steel, water and a soft cloth; Remove any detergent residue with clear, warm water and wipe dry with a soft cloth.



**ATTENTION: Please dispose the packing material environmentally friendly!  
The trolley and packing materials are not toys! Risk of accident for children!**

**For technical problems please contact your dealer.**